Yealink To rank To

YEALINK T57 USER GUIDE

USING BASIC CALL FUNCTIONS

MUTING AND UN-MUTING A CALL

Press 🛂 to mute the microphone during a call.

Press 2 again to un-mute the call.

PLACING A CALL

Using the handset:

- 1. Pick up the handset.
- 2. Enter the number, and then tap Call.

Using the speakerphone:

- 1. With the handset on-hook, press ••••.
- 2. Enter the number, and then tap Call.

Using the headset:

- 1. With the headset connected, press to activate the headset mode.
- 2. Enter the number, and then tap Call.

Note: During a call, you can alternate between the headset, hands-free speakerphone, and handset modes by pressing the **HEADSET** key, the **SPEAKERPHONE** key, or by picking up the handset. Headset mode requires a connected headset.

ANSWERING A CALL

Using the handset:

Pick up the handset.

Using the speakerphone:

Press (1).

Using the headset:

Press Q.

ENDING A CALL

Using the handset:

Hang up the handset or tap End Call.

Using the speakerphone:

Press or **End Call**.

Using the headset:

Tap **End Call**.

REDIALING A CALL

Press to enter the **Placed Calls** list, and then tap the desired entry.

Press twice when the phone is idle to dial out the last dialed number.

HOLDING AND RESUMING A CALL

To Hold a call:

Press or Hold during an active call.

To Resume the call, do one of the following:

- If there is only one call on hold, press **d** or **Resume**.
- If there is more than one call on hold, select the desired call, and then press or **Resume**.

TRANSFERRING A CALL -

You can transfer a call in the following ways:

Performing a Blind Transfer

- 1. Press or **Transfer** during an active call. The call is placed on hold.
- 2. Enter the number you want to transfer to.
- 3. Press (*C) or **B Transfer**.

Performing a Semi-Attended Transfer

- 1. Press 🕶 or **Transfer** during an active call. The call is placed on hold.
- 2. Enter the number you want to transfer to, and then press **Call**.
- 3. Press or **Transfer** when you hear the ring-back tone.

Performing a Attended Transfer

- 1. Press 😝 or **Transfer** during an active call. The call is placed on hold.
- 2. Enter the number you want to transfer to, and then press **Call**.
- 3. Press or **Transfer** when the second party answers.

INITIATING A CONFERENCE CALL

- 1. Tap **Conference** during an active call. The call is placed on hold.
- 2. Enter the number of the second party, and then tap **Conference**.
- 3. Tap **Conference** again when the second party answers. Three parties are now joined in the conference.

Note: You can split the conference call into two individual calls by tapping Split.

